

The logo for WoodEvo, featuring the brand name in a white, sans-serif font against a dark background.

WoodEvo.



BATTENS INSTALLATION GUIDE

Wood. Evolved.



CONGRATULATIONS ON YOUR NEW WOODEVO BATTEN!

Presenting the market's first fully solid PVC Batten, combining the rustic charm of natural timber with luxury and design appeal. This innovative product features heat-resistant ASA capping, eliminating the hassle of oiling and sanding for true maintenance-free durability.

CONTENT

INTRODUCTION	Page 1
DISCLAIMER & SAFETY INSTRUCTIONS	Page 2
CARE & MAINTENANCE TIPS	Page 3
MATERIALS	Page 4

INSTALLATION BATTEN

HIDDEN SCREW INSTALLATION	Page 5
SCREWS SHOWING INSTALLATION	Page 6

DISCLAIMER

- When installing Batten, always comply with the National Construction Code, Building Code of Australia, as well as all applicable Australian Standard and local building codes.
- All instructions in this document are provided for illustration purposes only and are not intended to replace the expertise of a licensed professional.
- WoodEvo assumes no responsibility for any risks and/or liability associated with the use of WoodEvo products during construction.

SAFETY INSTRUCTIONS

- The use of personal protective equipment (PPE) and all applicable safety equipment is required during any type of construction work.
- When working with WoodEvo Batten you should always wear appropriate gloves, respiratory protection (or dust mask), long sleeves, and safety glasses.
- Standard woodworking tools can be used with WoodEvo Batten. Please ensure you take appropriate steps to ensure all tools are used safely.
- Static electricity advisory: it is normal for static electricity to occasionally build up in plastic-based products. This phenomenon is rare and is typically more noticeable in dry conditions.

HEAT & FIRE CONSIDERATIONS

WoodEvo products could potentially be damaged by contact with strong heat sources such as, but not limited to, fire, or the reflection of sunlight from energy-efficient window products. Please ensure you consider such risks when planning the location and configuration of your Batten.

CARE & MAINTENANCE

CLEANING YOUR BATTENS

Use a gentle soap and water solution for regular cleaning. For more stubborn stains, use a solution of diluted white vinegar in water.

Caution:
Avoid using abrasive cleaners and solvent-based chemicals which can cause harm to the surface of the batten.

USING A PRESSURE WASHER

A pressure washer (up to 1400psi) can be used to clean the batten. Always ensure you use a wide spray setting, and keep the nozzle a safe distance from the batten surface.

Warning:
Using a concentrated or narrow spray setting, or moving the nozzle too close to the batten can cause damage to the surface of the batten.


MAINTENANCE TIPS

Ensure the Batten isn’t in direct contact with any heat-producing object, for example. grill or BBQ equipment to help protect the batten surface from heat damage.


Avoid placing rubber or vinyl products (such as welcome mats or planters) directly on the batten surface. In certain conditions, these materials can react with the batten surface and lead to a white stain. This stain is repairable; if this occurs, please contact your reseller.

Avoid cutting or drilling metal on the batten, as hot metal shavings may embed into, and damage, the batten surface.

MATERIALS

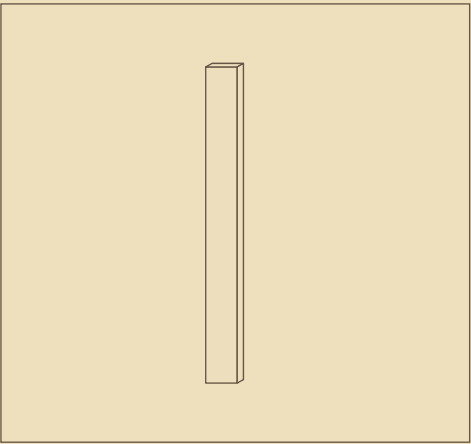

BATTEN
Dimensions: 50mm x 25mm

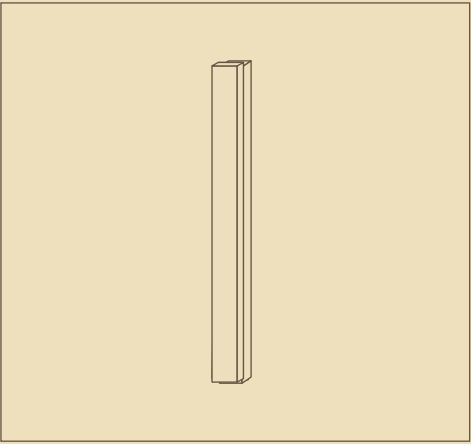


BATTEN
Dimensions: 40mm x 30mm



COLOUR MATCHING PLUGS


HIDDEN SCREW INSTALLATION

TIMBER AND METAL SUBFRAME SCREWS

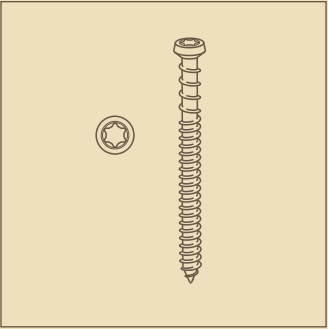

316 Stainless Steel Screws
Non-Coloured Screws.

(Hidden Screw application)
To be used with colour matching plugs.

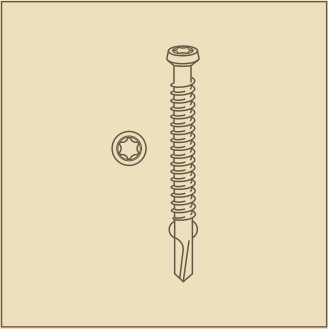


12g 45mm Screws

Metal screws can only be used with the colour matching plugs.
(Hidden Screw Application)

SURFACE SCREW INSTALLATION

TIMBER SUBFRAME ONLY SCREWS

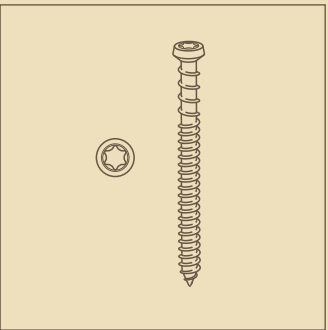


316 Stainless Steel Screws

Colour Matched Screws
(Screw on Surface application)

INSTALLATION BATTEN


HIDDEN SCREW INSTALLATION


Ensure the horizontal supports do not exceed 600mm centres.

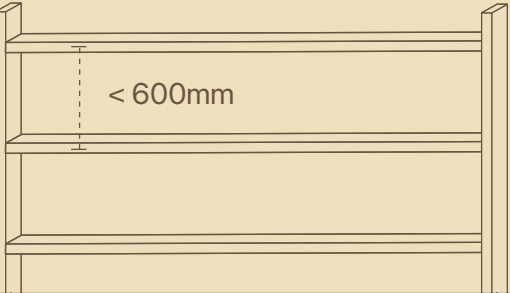

1.


Pre-drill your batten with a 5mm drill bit. Make sure to do this along the frame rail.

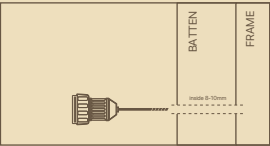


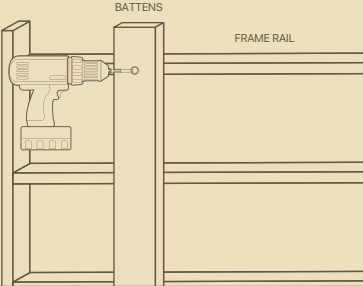

2.


Drive the screw inside the batten under the surface. Between 8-10mm. Make sure one screw is used per rail to avoid damaging the battens. Pre-drill your batten with a 5mm drill bit. Make sure to do this along the frame rail.

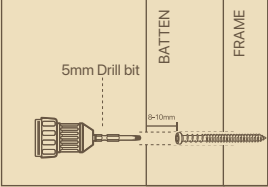


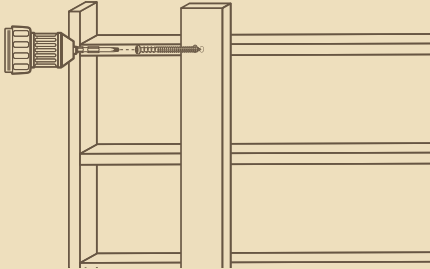

3.


Get your plug and push it into your screw hole. Hammer it in the rest of the way till it's flush with the batten board.

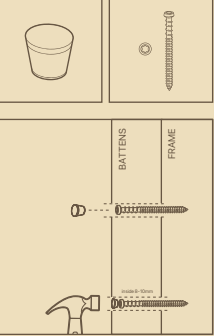

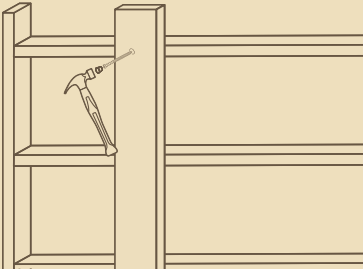

4.


Final look

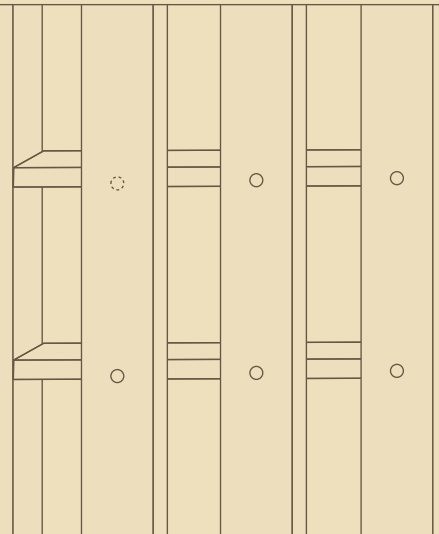

5.


SURFACE SCREW INSTALLATION


Align your frame and measure your batten out on the frame, making sure spacing is accurate the whole way. Mark out your battens if needed!

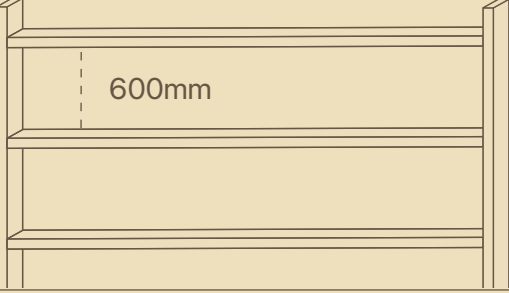

1.


Pre-drill your batten with a 5mm drill bit. Make sure to do this along the frame rail.

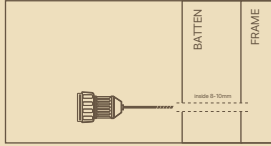


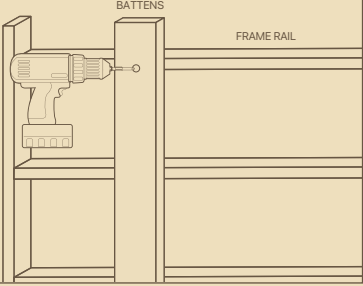

2.


Drive the screw inside the batten under the surface. Between 8-10mm. Make sure one screw is used per rail to avoid damaging the battens. Pre-drill your batten with a 5mm drill bit. Make sure to do this along the frame rail.

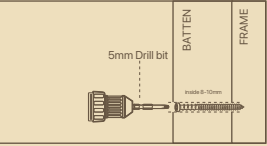

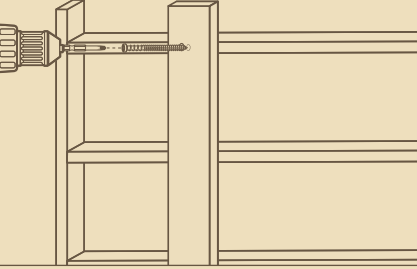

3.

Final look

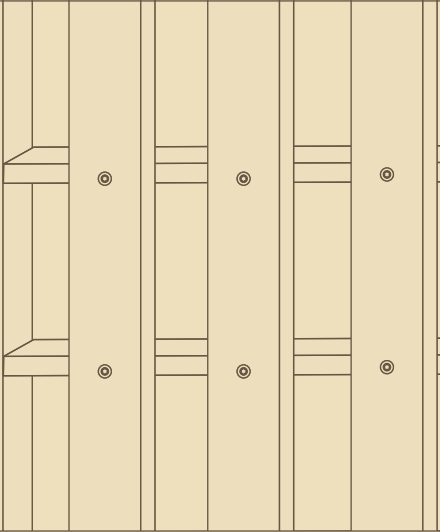

5.



WOOD.EVOLVED.

CONTACT US

If you require any further assistance with assembling your new WoodEvo Battens, please contact us.


NaturalTech Pty. Ltd.

3 Bass Court
Keysborough VIC, 3168


1300 966 338

info@woodevo.com.au
www.woodevo.com.au

MATERIALS

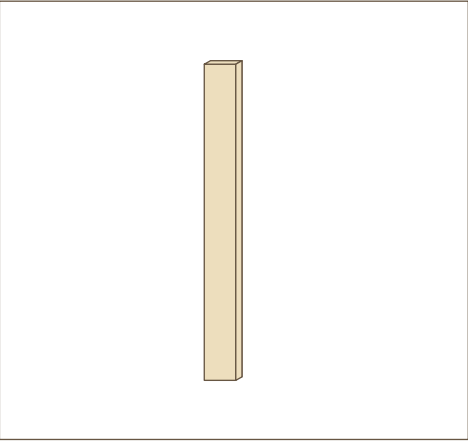

BATTEN
Dimensions: 50mm x 25mm

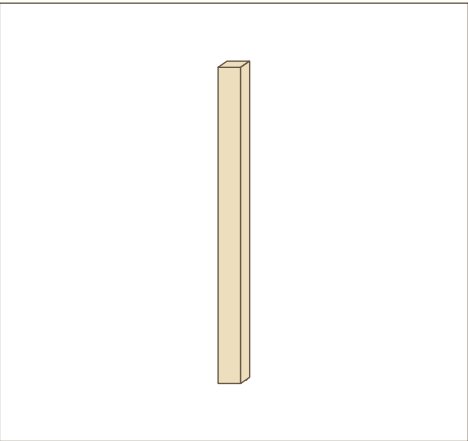


BATTEN
Dimensions: 40mm x 30mm



COLOUR MATCHING PLUGS


HIDDEN SCREW INSTALLATION

TIMBER AND METAL SUBFRAME SCREWS

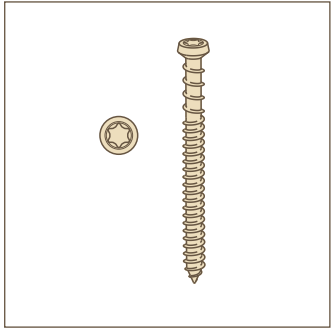

316 Stainless Steel Screws
Non-Coloured Screws.


(Hidden Screw application)
To be used with colour matching plugs.

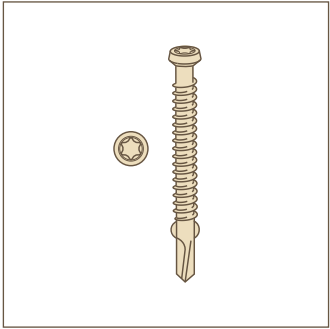

12g 45mm Screws
Metal screws can only be used with the colour matching plugs.
(Hidden Screw Application)

SURFACE SCREW INSTALLATION

TIMBER SUBFRAME ONLY SCREWS

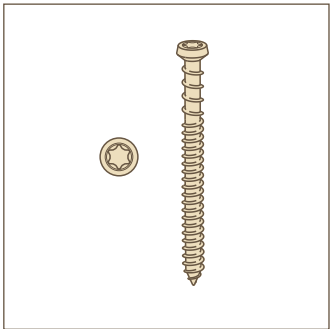

316 Stainless Steel Screws
Colour Matched Screws
(Screw on Surface application)

WoodEvo.



BATTEN INSTALLATION GUIDE



CONGRATULATIONS ON YOUR NEW WOODEVO BATTEN PURCHASE!

Your Batten has been carefully engineered to provide years of maintenance-free enjoyment for you and your family. Please follow this installation guide carefully to ensure that your project is correctly and safely installed.

Presenting the market's first PVC Batten, combining the rustic charm of natural timber with luxury and design appeal. This innovative product features heat-resistant ASA capping, eliminating the hassle of oiling and sanding for true maintenance-free durability.

CONTENT

INTRODUCTION	Page 1
DISCLAIMER & SAFETY INSTRUCTIONS	Page 2
CARE & MAINTENANCE TIPS	Page 3
MATERIALS	Page 4
INSTALLATION BATTEN	
HIDDEN SCREW INSTALLATION	Page 5
SURFACE SCREW INSTALLATION	Page 6



DISCLAIMER

- The product is intended to have natural variations (colour/texture/dimension) to replicate natural products. There may be slight batch colour variations. These variations are not a defect and are not included in warranty claims.
- When installing battens, always comply with the National Construction Code, Building Code of Australia, as well as all applicable Australian Standard and local building codes.
- All instructions in this document are provided for illustration purposes only and are not intended to replace the expertise of a licensed professional.
- WoodEvo assumes no responsibility for any risks and/or liability associated with the use of WoodEvo products during construction.

SAFETY INSTRUCTIONS

- The use of personal protective equipment (PPE) and all applicable safety equipment is required during any type of construction work.
- When working with WoodEvo battens you should always wear appropriate gloves, respiratory protection (or dust mask), long sleeves, and safety glasses.
- Standard woodworking tools can be used with WoodEvo battens. Please ensure you take appropriate steps to ensure all tools are used safely.
- Static electricity advisory: it is natural for static electricity to build up in plastic-based products. This phenomenon is rare and is typically more noticeable in dry conditions.

HEAT & FIRE CONSIDERATIONS

WoodEvo products could potentially be damaged by contact with strong heat sources such as, but not limited to, fire, or the reflection of sunlight from energy-efficient window products. Please ensure you consider such risks when planning the location and configuration of your battens.

CARE & MAINTENANCE

CLEANING YOUR BATTENS

Use a gentle soap and water solution for regular cleaning. For more stubborn stains, use a solution of diluted white vinegar in water.

Caution:

Avoid using abrasive cleaners and solvent-based chemicals which can cause harm to the surface of the batten.

USING A PRESSURE WASHER

A pressure washer (up to 1400psi) can be used to clean the battens. Always ensure you use a wide spray setting, and keep the nozzle a safe distance from the batten surface.

Warning:

Using a concentrated or narrow spray setting, or moving the nozzle too close to the batten can cause damage to the surface of the batten.


MAINTENANCE TIPS

Ensure the batten isn't in direct contact with any heat-producing object, for example. grill or BBQ equipment to help protect the batten surface from heat damage.


Avoid placing rubber or vinyl products (such as plastic drop sheets) against the batten surface. In certain conditions, these materials can react with the batten surface and lead to a white stain. This stain is repairable; if this occurs, please contact your reseller.

Avoid cutting or drilling metal near the battens, as hot metal shavings may embed into, and damage, the batten surface.

MATERIALS

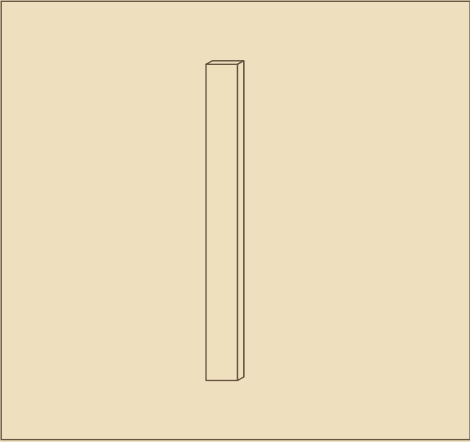

BATTEN
Dimensions: 50mm x 25mm

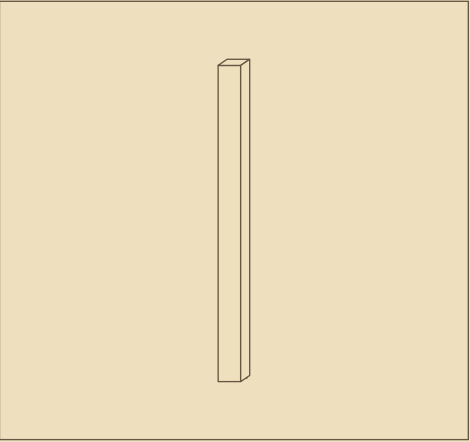


BATTEN
Dimensions: 40mm x 30mm



COLOUR MATCHING PLUGS


HIDDEN SCREW INSTALLATION

TIMBER AND METAL SUB-FRAME SCREWS

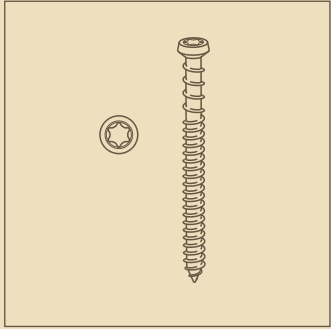

316 Stainless Steel
Non-Coloured
Timber Screws
12g x 65mm (T20 Bit)

To be used with colour
matching plugs

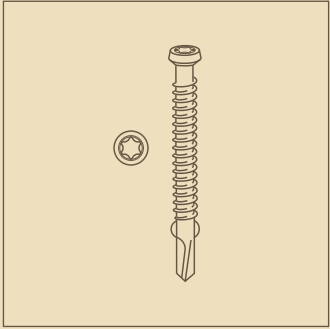


410 Stainless Steel
Non-Coloured
Metal Screws
12g x 45mm (T20 Bit)

Metal screws can only be
used with the colour
matching plugs

SURFACE SCREW INSTALLATION

TIMBER SUB-FRAME ONLY SCREWS

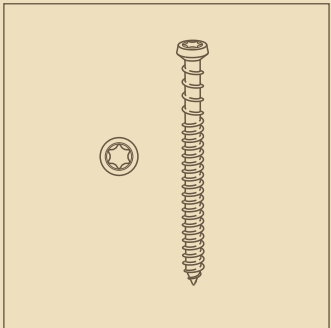


316 Stainless Steel Colour
Matching Timber Screws
12g x 65mm (T20 Bit)

(Surface screw application)

INSTALLATION BATTEN

HIDDEN SCREW INSTALLATION


Ensure the horizontal supports do not exceed 600mm centres.

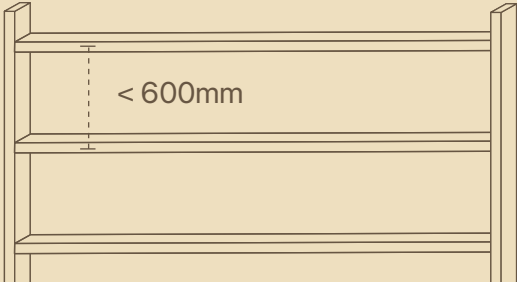

< 600mm

1.


Pre-drill your batten with a 5mm drill bit. Making sure the hole aligns with your rail/frame.

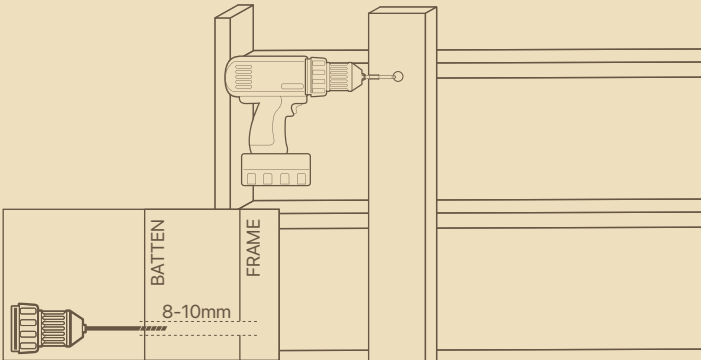

8-10mm

2.


Drive the screw so the head is embedded 8-10mm under the Batten's surface. Make sure one screw is used per rail to avoid damaging the battens. Follow drill instructions in Step 2.

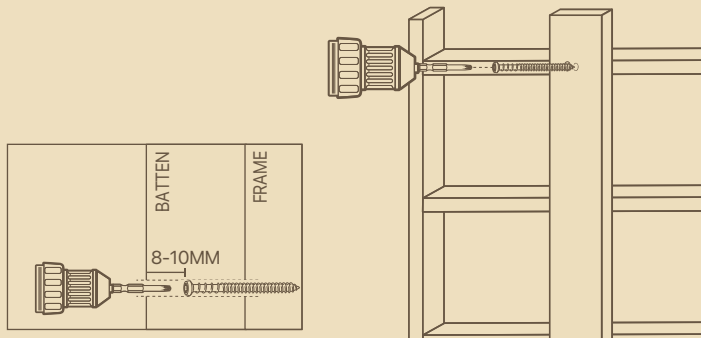

8-10MM

3.


Gently push or tap the plug into the screw hole. Immediately add colour-matched plug level with Batten surface. For best results, use a small headed hammer or mallet.

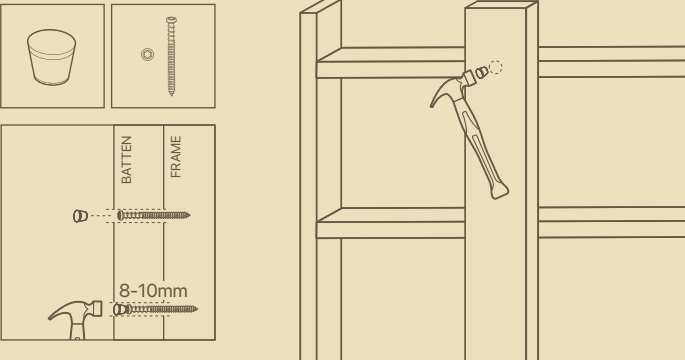

8-10mm

4.

Final look

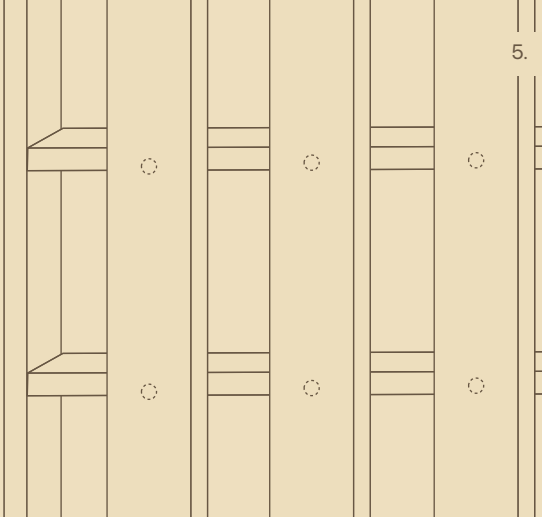


5.

SURFACE SCREW INSTALLATION


1.

Ensure the horizontal supports do not exceed 600mm centres.

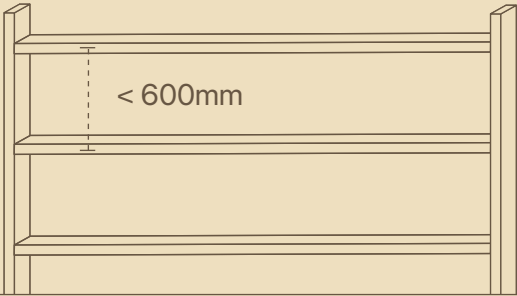


2.

Pre-drill your batten with a 5mm drill bit. Making sure the hole aligns with your rail/frame.

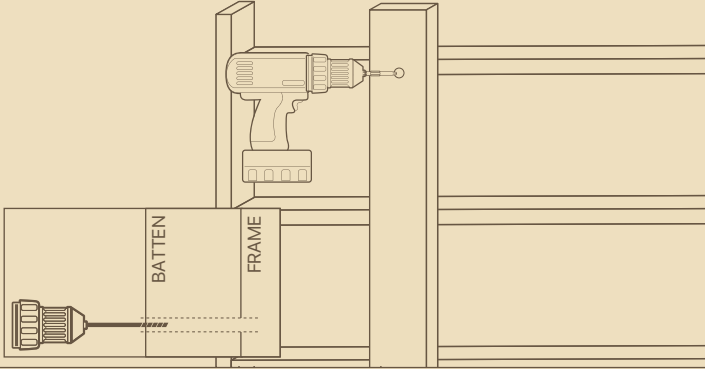


3.

Drive the screw to finish flush with the Batten surface.
Make sure one screw is used per rail to avoid damaging the battens. Follow drill instructions in Step 2.

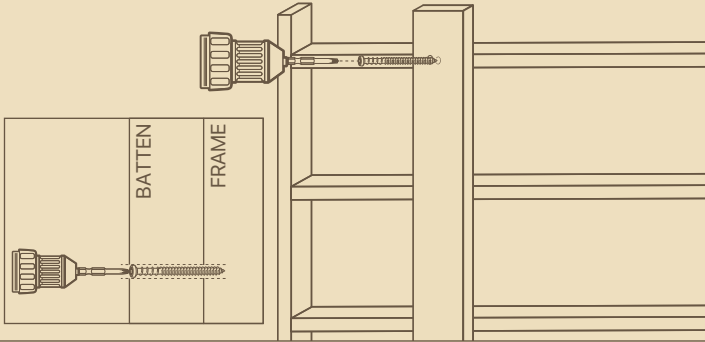

4.

Final look

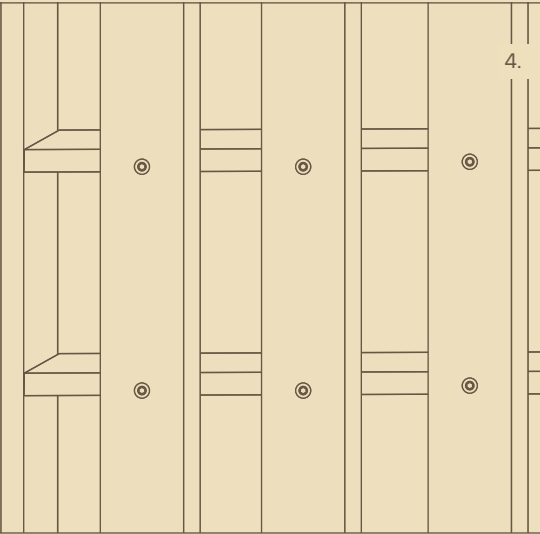



WOOD.EVOLVED.

CONTACT US

If you require any further assistance with assembling your new WoodEvo Battens, please contact us.

NaturalTech Pty. Ltd.

33 Brooklyn Avenue,
Dandenong VIC, 3175

1300 966 338

info@woodevo.com.au
www.woodevo.com.au